

# Transfer switch OTEC open transition



> **Specification sheet**  
40 - 1200 Amp

**Our energy working for you.™**



## Description

OTEC transfer switches are designed for operation and switching of electrical loads between primary power and standby generator sets. They are suitable for use in emergency, legally required, and optional standby applications. The switches monitor both power sources, signal generator set startup, automatically transfer power, and return the load to the primary power source once a stable utility is available.

The fully integrated controller is designed for practical functionality, with LED indicators and digital pushbuttons for ease of operator use.



All switches are UL 1008 Listed with UL Type Rated cabinets and UL Listed CU-AL terminals.



All switches are certified to CSA 282 Emergency Electrical Power Supply for Buildings, up to 600 VAC.

**NEC**

Equipment shall be suitable for use in systems compliant to 700, 701 and 702.



All switches comply with NFPA 70, 99 and 110.

**NEMA**

All switches comply with NEMA ICS 10.



All switches comply with IEEE 446 Recommended Practice for Emergency and Standby Power Systems.



This transfer switch is designed and manufactured in facilities certified to ISO9001.

## Features

**Microprocessor control** - Easy-to-use, standard control. LEDs display transfer switch status; pushbuttons allow operator to activate control test, exercise timing and transfer mode.

**Programmed transition** - Open transition timing can be adjusted to completely disconnect the load from both sources for a programmed time period, as recommended by NEMA MG-1 for transfer of inductive loads.

**Advanced transfer switch mechanism** - Unique bi-directional linear actuator provides virtually friction-free, constant force, straight-line transfer switch action during automatic operation.

**Manual operation** - Manual operating handles, shielded termination, and over-center contact mechanisms allow effective manual operation under de-energized conditions.

**Positive interlocking** - Mechanical and electrical interlocking prevent source-to-source connection through the power or control wiring.


**Main contacts** - Heavy-duty silver alloy contacts with multi-leaf arc chutes are rated for 100% load interruption. They require no routine contact maintenance and provide 100% continuous current ratings.

**Easy service/access** - Single-plug harness connection and compatible terminal markings simplify servicing. Access space is ample. Door-mounted controls are field-programmable; no tool is required.

**Complete product line** - Cummins Power Generation offers a wide range of equipment, accessories and services to suit virtually any backup power application.

**Warranty and service** - Products are backed by a comprehensive warranty and a worldwide network of distributors with factory-trained service technicians.

## Transfer switch mechanism

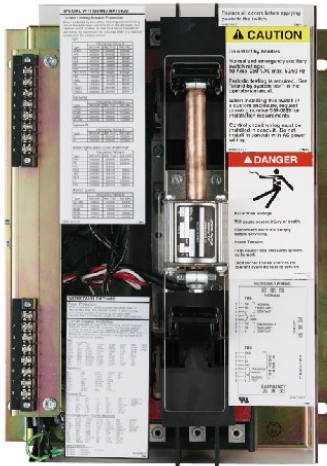

- Transfer switch mechanism is electrically operated and mechanically held in the Source 1 and Source 2 positions. The transfer switch incorporates electrical and mechanical interlocks to prevent inadvertent interconnection of the sources.
- Independent break-before-make action is used for both 3-pole and 4-pole/switched neutral switches. This design allows use of sync check operation when required, or control of the operating speed of the transfer switch for proper transfer of motor and rectifier-based loads (programmed transition feature).
- True 4-pole switching allows for proper ground (earth) fault sensing and consistent, reliable operation for the life of the transfer switch. The neutral poles of the transfer switch have the same ratings as the phase poles and are operated by a common crossbar mechanism, eliminating the possibility of incorrect neutral operation at any point in the operating cycle, or due to failure of a neutral operator.
- Electrical interlocks prevent simultaneous closing signals to normal and emergency contacts and interconnection of normal and emergency sources through the control wiring.
- High pressure silver alloy contacts resist burning and pitting. Separate arcing surfaces further protect the main contacts. Contact wear is reduced by multiple leaf arc chutes that cool and quench the arcs. Barriers separate the phases to prevent interphase flashover. A transparent protective cover allows visual inspection while inhibiting inadvertent contact with energized components.
- Switch mechanism, including contact assemblies, is third-party certified to verify suitability for applications requiring high endurance switching capability for the life of the transfer switch. Withstand and closing ratings are validated using the same set of contacts, further demonstrating the robust nature of the design.

## Specifications

<b>Voltage rating</b>	Transfer switches rated from 40 A through 1200 A are rated up to 600 VAC, 50 or 60 Hz.
<b>Arc interruption</b>	Multiple leaf arc chutes cool and quench the arcs. Barriers prevent interphase flashover.
<b>Neutral bar</b>	A full current-rated neutral bar with lugs is standard on enclosed 3-pole transfer switches.
<b>Auxiliary contacts</b>	Two contacts (one for each source) are provided for customer use. Wired to terminal block for easy access. Rated at 10A continuous and 250 VAC maximum.
<b>Operating temperature</b>	-22 °F (-30 °C) to 140 °F (60 °C)
<b>Storage temperature</b>	-40 °F (-40 °C) to 140 °F (60 °C)
<b>Humidity</b>	Up to 95% relative, non-condensing
<b>Altitude</b>	Up to 10,000 ft (3,000 m) without derating
<b>Total transfer time (source-to-source)</b>	Will not exceed 6 cycles at 60 Hz with normal voltage applied to the actuator and without delayed transition enabled.
<b>Manual operation handles</b>	Transfer switches are equipped with permanently attached operating handles and quick-break, quick-make contact mechanisms suitable for manual operation under de-energized conditions.

**Open transition/programmed** – Controls the time required for the device to switch from source to source, so that the load-generated voltages decay to a safe level before connecting to an energized source. Recommended by NEMA MG-1 to prevent nuisance tripping breakers and load damage. Adjustable 0-60 seconds, default 0 seconds.

**Open transition/in-phase** – Initiates open transition transfer when in-phase monitor senses both sources are in phase. Operates in a break-before-make sequence. Includes ability to enable programmed transition as a backup. If sources are not in phase within 120 seconds, the system will transfer using programmed transition.

**Our energy working for you.™**

[www.cumminspower.com](http://www.cumminspower.com)

## Microprocessor control

- Simple, easy-to-use control provides transfer switch information and operator controls
- LED lamps for source availability and source connected indication, exercise mode, and test mode. LED status lamps also provided for control set-up and configuration.
- Pushbutton controls for initiating test, overriding time delays and setting exercise time.
- Field-configurable for in-phase open or programmed open transition.
- Integral exerciser clock
- Control is prototype-tested to withstand voltage surges per EN 60947-6-1.
- Gold-flashed generator start contacts



## Control functions

**Voltage sensing:** All phases on the normal source and single phase on generator source. Normal Source Pickup: adjustable 90-95%, Dropout: adjustable 70-90% of nominal voltage; Generator Source Pickup: 90%, dropout: 75% of nominal voltage.

**Frequency sensing:** Generator Source Pickup: 90% of nominal frequency; Dropout: 75% of nominal frequency.

**Exerciser clock:** Switch is furnished with an integral engine exerciser configurable for operation on a 7, 14, 21, or 28-day cycle with a fixed exercise period duration of 20 minutes. A 12-hr exerciser time offset allows for the convenient setting of exercise time without the need to activate the timer at the exact time that you need to schedule the generator exercise for. Software selectable capability allows for the exercising of the generator with or without load.

## Time-delay functions

**Engine start:** Prevents nuisance genset starts due to momentary power system variation or loss. Adjustable: 0-10 seconds; default: 3 seconds.

**Transfer normal to emergency:** Allows genset to stabilize before application of load. Prevents power interruption if normal source variation or loss is momentary. Allows staggered transfer of loads in multiple transfer switch systems. Adjustable 0-300 seconds, default 5 seconds.

**Retransfer emergency to normal:** Allows the utility to stabilize before retransfer of load. Prevents needless power interruption if return of normal source is momentary. Allows staggered transfer of loads in multiple transfer switch systems. Adjustable 0-30 minutes, default 10 minutes.

**Genset stop:** Maintains availability of the genset for immediate reconnection in the event that the normal source fails shortly after transfer. Allows gradual genset cool down by running unloaded. Adjustable 0-30 minutes, default 10 minutes.

**Delayed (programmed) transition:** Controls the speed of operation of the transfer switch power contacts to allow load generated voltages from inductive devices to decay prior to connecting a live source. Adjustable 0-10 seconds, default 0 seconds.

**Elevator signal:** Provides a relay output contact for the elevator signal relay (load disconnect). The signal can also be configured to provide a post transfer delay of the same duration. Adjustable: 0-300 seconds (requires optional elevator signal relay for use).

## Options

**Elevator signal relay:** Provides a relay output contact for the signal relay function

**Programmable exerciser clock:** Provides a fully-programmable 7-day clock to provide greater flexibility in scheduling exercise periods than standard integral exerciser. Time-of-day setting feature operates generator during periods of high utility rates.

**Our energy working for you.™**

[www.cumminspower.com](http://www.cumminspower.com)

## UL withstand and closing ratings

The transfer switches listed below must be protected by circuit breakers or fuses. Referenced drawings include detailed listings of specific breakers or fuse types that must be used with the respective transfer switches. Consult with your distributor/dealer to obtain the necessary drawings. Withstand and Closing Ratings (WCR) are stated in symmetrical RMS amperes.

Transfer switch ampere	MCCB protection			Special circuit breaker protection		
	WCR at volts max with specific manufacturers MCCBs	Max MCCB rating	Drawing reference	With specific current limiting breakers (CLB)	Max CLB rating	Drawing reference
40, 70, 125 3-pole	14,000 at 600	225 A	098-6885	200,000 @ 600	225 A	098-6918
40, 70, 125 4-pole	30,000 at 600	225 A	098-6885	200,000 @ 600	225 A	098-6918
150, 225, 260	30,000 at 600	400 A	098-6886	200,000 @ 600	400 A	098-6919
300, 400, 600	65,000 at 600	1200 A	098-6887	200,000 @ 600	1200 A	098-6920
800, 1000	65,000 at 480	1400 A	098-6888	200,000 @ 600	1400 A	098-6921
	50,000 at 600					
1200	85,000 at 480	1600 A	A030U183	200,000 @ 600	1600 A	A030U185
	65,000 at 600					

## Fuse protection

Transfer switch ampere	WCR at volts max. with current limiting fuses	Max fuse, size and type	Drawing reference
40, 70, 125 3- and 4-pole	200,000 at 600	200 A Class, J, RK1, RK5, T	098-6885
150, 225, 260	200,000 at 600	1200 A Class L or T, or 600 A class J, RK1, RK5	098-6886
300, 400, 600	200,000 at 600	1200 A Class L or T, or 600 A Class, J, RK1, RK5	098-6887
800, 1000	200,000 at 600	2000 A Class L or 1200 A class T or 600 A class J, RK1, RK5	098-6888
1200	200,000 at 600	2000 A Class L or 1200 A class T or 600 A class J, RK1, RK5	A030U183

## 3-cycle ratings

Transfer switch ampere	WCR at volts max 3-cycle rating	Max MCCB rating	Drawing reference
1200	42,000 at 600	2000 amps	A030U183

**Our energy working for you.™**

[www.cumminspower.com](http://www.cumminspower.com)

## Enclosures

The transfer switch and control are wall-mounted in a key-locking enclosure. Wire bend space complies with 2008 NEC.

### Dimensions - transfer switch in UL type 1 enclosure

Amp rating	Height		Width		Depth				Weight		Outline drawing
	in	mm	in	mm	Door closed		Door open		lb	kg	
					in	mm	in	mm			
40, 70, 125 3-pole	27.0	686	20.5	521	12.0	305	31.5	800	82	37	0310-0544
40, 70, 125 4-pole	35.5	902	26.0	660	16.0	406	41.0	1042	165	75	0500-4896
150, 225	35.5	902	26.0	660	16.0	406	41.0	1042	165	75	0310-0414
260	43.5	1105	28.5	724	16.0	406	43.0	1093	170	77	0310-0540
300, 400, 600	54.0	1372	25.5	648	18.0	457	42.0	1067	225	102	0310-1307
800, 1000	68.0	1727	30.0	762	19.5	495	48.5	1232	360	163	0310-0417
1200	90.0	2286	39.0	991	27.0	698	63.0	1600	730	331	A030L411

### Dimensions - transfer switch in UL type 3R, 4, 4X, or 12 enclosure

Amp rating	Height		Width		Depth				Weight		Cabinet type	Outline drawing
	in	mm	in	mm	Door closed		Door open		lb	kg		
					in	mm	in	mm				
40, 70, 125 3-pole	34.0	864	26.5	673	12.5	318	36.5	927	125	57	3R, 12	0310-0453
	46.0	1168	32.0	813	16.0	406	46.0	1168	255	102	4	0310-0445
40, 70, 125 4-pole	42.5	1080	30.5	775	16.0	406	44.0	1118	215	97	3R, 12	0500-4896
	46.0	1168	32.0	813	16.0	406	46.0	1168	255	102	4	0500-4896
150, 225	42.5	1080	30.5	775	16.0	406	44.0	1118	215	97	3R, 12	0310-0454
	46.0	1168	32.0	813	16.0	406	46.0	1168	255	102	4	0310-0446
260	46.0	1168	32.0	813	16.0	406	46.0	1168	255	102	3R, 12	0310-0455
											4	0310-0447
											4X	0500-4184
300, 400, 600	59.0	1499	27.5	699	16.5	419	41.5	1054	275	125	3R, 12	0310-1315
	73.5	1867	32.5	826	19.5	495	49.5	1257	410	186	4	0310-1316
800, 1000	73.5	1867	32.5	826	19.5	495	49.5	1257	410	186	4X	0500-4185
											3R, 12	0310-0457
											4	0310-0449
1200	90.0	2286	39.0	991	27.0	698	63.0	1600	730	331	3R, 12, 4, 4X	A030L411

### Transfer switch lug capacities

All lugs accept copper or aluminum wire unless indicated otherwise.

Transfer switch ampere	Cables per phase	Size
40, 70, 125 3-pole	1	#12 AWG-2/0
40 4-pole	1	#12 AWG-2/0
70, 125 4-pole	1	#6 AWG - 300 MCM
150, 225	1	#6 AWG - 300 MCM
260	1	#6 AWG - 400 MCM
300, 400	1	3/0 - 600 MCM
300, 400	2	3/0 - 250 MCM
600	2	250 - 500 MCM
800	4	250 - 500 MCM
1000, 1200	4	#2 AWG-750 MCM

**Our energy working for you.™**

[www.cumminspower.com](http://www.cumminspower.com)

## Submittal detail

### Amperage ratings

- 40
- 70
- 125
- 150
- 225
- 260
- 300
- 400
- 600
- 800
- 1000
- 1200

### Voltage ratings

- R020 120
- R038 190
- R021 208
- R022 220
- R023 240
- R024 380
- R025 416
- R035 440
- R026 480
- R027 600

### Pole configuration

- A028 Poles - 3 (solid neutral)
- A029 Poles - 4 (switched neutral)

### Frequency

- A044 60 Hertz
- A045 50 Hertz

### Application

- A035 Utility to genset

### System options

- A041 Single phase, 2-wire or 3-wire
- A042 Three phase, 3-wire or 4-wire

### Enclosure

- B002 Type 3R: intended for outdoor use, provides some protection from dirt, rain and snow (similar to IEC Type IP34)
- B003 Type 4: indoor or outdoor use, provides some protection from wind-blown dust and water spary (similar to IEC Type IP65)
- B010 Type 12: indoor use, some protection from dust (similar to IEC Type IP61)
- B025 Type 4X: stainless steel, indoor or outdoor use, provides some protection from corrosion (similar to IEC Type IP65)

### Standards

- A046 UL 1008/CSA certification
- A080 Seismic certification

### Control voltage

- M033 12V, Genset starting voltage
- M034 24V, Genset starting voltage

### Control options

- J030 External exercise clock
- M032 Elevator signal relay

### Battery chargers

- K001 2 amps, 12/24 volts
- KB59 15 amps, 12 volts
- KB60 12 amps, 24 volts

### Auxiliary relays

Relays are UL Listed and factory installed. All relays provide (2) normally closed isolated contacts rated 10 A @ 600 VAC. Relay terminals accept (1) 18 gauge to (2) 12 gauge wires per terminal.

- L101 24 VDC coil - installed, not wired (for customer use).
- L102 24 VDC coil - emergency position - relay energized when switch is in source 2 (emergency) position.
- L103 24 VDC coil - normal position - relay energized when switch is in source 1 (normal) position
- L201 12 VDC coil installed, not wired (for customer use)
- L202 12 VDC coil - emergency position - relay energized when switch is in source 2 (emergency) position
- L203 12 VDC coil - normal position - relay energized when switch is in source 1 (normal) position

### Miscellaneous options

- C027 Cover - guard
- M003 Terminal block - 30 points (not wired)

### Optional lug kits

- N032 Lug adapters, compression, ½ stab
- N045 Cable lugs, mechanical, 600 MCM, 4 per pole
- N066 Cable lugs, mechanical, 750 MCM, 4 per pole

### Warranty

- G009 1 year comprehensive
- G004 2 year comprehensive
- G006 5 year basic
- G007 5 year comprehensive
- G008 10 year major components

### Shipping

- A051 Packing - export box (800-1000 A)

### Accessories

- AC-170 Accessories specifications sheet

## Cummins Power Generation

### Americas

1400 73<sup>rd</sup> Avenue N.E.  
Minneapolis, MN 55432 USA  
Phone: 763 574 5000  
Fax: 763 574 5298

### Europe, CIS, Middle East and Africa

Manston Park Columbus Ave.  
Manston Ramsgate  
Kent CT 12 5BF United Kingdom  
Phone 44 1843 255000  
Fax 44 1843 255902

### Asia Pacific

10 Toh Guan Road #07-01  
TT International Tradepark  
Singapore 608838  
Phone 65 6417 2388  
Fax 65 6417 2399

## Our energy working for you.™

[www.cumminspower.com](http://www.cumminspower.com)